

SWORDFISH Manual Table Of Contents

Package Contents	1
Safety Notice	2
Product Features	2
Hardware Diagram	3
Charging the Battery	5
Connect to PC/Laptop/Smartphone/Tablet/Media Devices	6
Mode Selections: Movie/Gaming or Music	7
Connect to XBOX ONE™	8
Connect to PS4™	8
Important Information	9

Package Contents

1. One EXSOUND SWORDFISH DL Headset
2. One EXSOUND SWORDFISH DL Micro-USB charging cable
3. One EXSOUND SWORDFISH DL Soft Carry Bag
4. One EXSOUND SWORDFISH DL Built-in Microphone
5. One EXSOUND Volume Controller for PS4™ (optional)
6. One Operation Manual

Safety Notice

Warning


Continued exposure to high volumes of noise in headsets can cause long-term hearing damage. Your ears will adapt to loud volume levels over time and damage your hearing even if you don't feel any discomfort. Maintain the volume at an adequate level is important while using the headset. The louder the sound is, the less time it takes to affect your hearing. It is recommended that before putting the headset on, turn the volume down completely, then slowly increase it to a moderate and comfortable level.

Product Features

EXSOUND SWORDFISH – Dolby Pro Logic IIx, Dolby Headphone Technologies to Output Virtual 7.1 Channel Surrounding Sound For Gaming and Music Entertainment

- Specific design to work on PS4™, Xbox One, Smartphone, Tablet, and Laptop with Dolby 7.1 surround sound for ultimate Gaming/Music/Movie experience with Movie/Gaming or Music mode selections
- High-fidelity sound quality with crystal clear high & mid-range and booming bass
- Standard 3.5mm 4 pole plug connection. Simply just plug in and play
- Foldable design. Easy to carry and store with the included soft carry bag
- Built-in microphone for on-the-move phone calls
- Built-in battery for continuing 7-hours of music entertainment
- Ergonomics design of breathable sponge covered with smooth protein material ear cushion, provide extended-wear comfort experience

Hardware Diagram

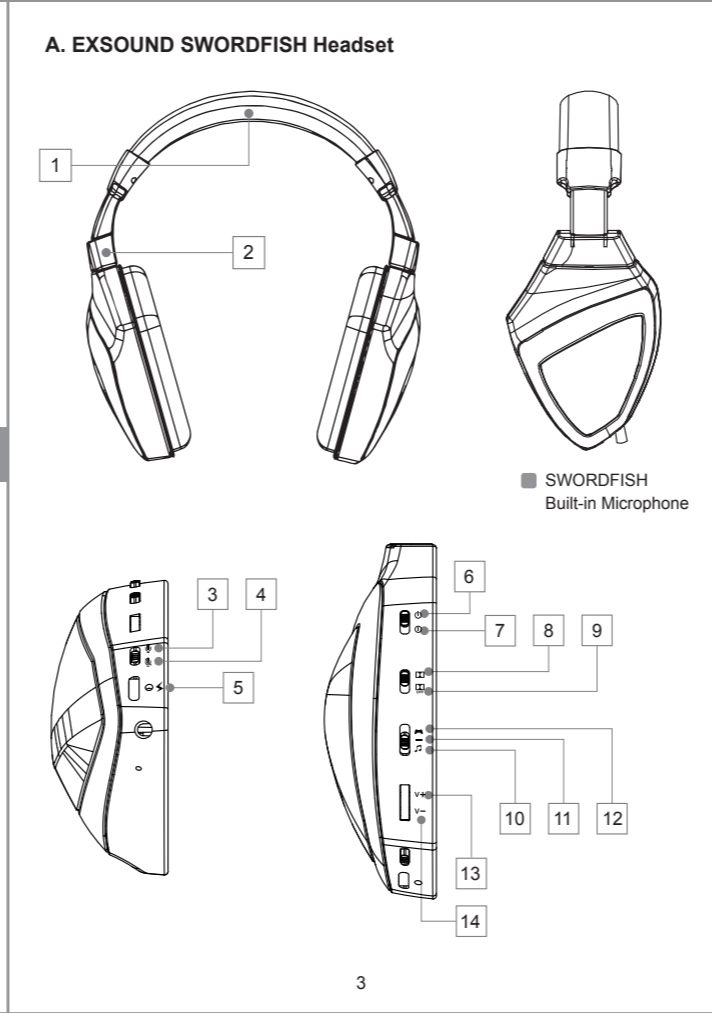

Hardware Diagram

1. High quality & soft material headband
 2. Easy to adjust to fit in head shape
 3. Microphone On
 4. Microphone Off
 5. Charging Port
 6. Power ON
 7. Power Off
 8. Dolby 7.1 Surround Sound On
 9. Dolby 7.1 Surround Sound Off
 10. Music Mode
 11. Normal Mode
 12. Movie/Gaming Mode
 13. Volume Up
 14. Volume Down
- B. Folding EXSOUND SWORDFISH**
- To carry SWORDFISH with minimal space requirement, you can fold it in 2 different ways:
-
- To fold the headset as flat as possible: Turn the ear cup 90° as illustrated and put it into the carry bag
- To fold the headset as compact as possible: Fold the ear cups inward as illustrated and put it into the carry bag

Charging the Battery

1. To charge the SwordFish, plug in the USB end to any power source with USB port such as power adapter or computer
 2. Plug the micro-USB end of the cable into the charging port on your SwordFish
 3. LED indicator will display blue light while charging, and will shut off once charging is complete.
-

 
Connect to PC / Laptop / Smartphone / Tablet / Media Devices

A. With Dolby Surround Sound


1. Turn ON the power of SwordFish by switching the first button to the top
2. Switch the second button to the top to make sure the Dolby technology is activated
2. Plug the 3.5mm connector into the 3.5mm port on the device

B. With Original Sound

1. Turn OFF the power of SwordFish by switching the first button to the bottom
2. Switch the second button to the bottom to make sure the Dolby technology is deactivated
2. Plug the 3.5mm connector into the 3.5mm port on the device

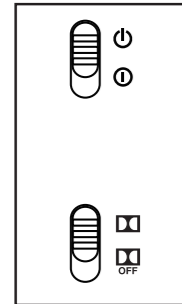

 A. With Dolby Surround Sound

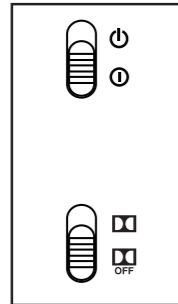

B. With Original Sound

© Note: For some Smartphones, the pin layout might have different definition. Please contact the manufacturer for further information.

Mode Selections: Movie/Gaming or Music

 
With Dolby Technology, SWORDFISH has two modes for selection: Movie/Gaming or Music. You could select from these two modes based on your preference. Please be noted: Movie/Gaming or Music function will only function when the Dolby technology is activated.

A. To switch to Movie/Gaming mode:


1. Turn ON the power of SwordFish by switching the first button to the top
2. Switch the second button to the top to make sure the Dolby technology is activated
3. Switch the third button to the top on the left earcup to activate the Movie/Gaming mode

B. To switch to Music mode:

1. Turn ON the power of SwordFish by switching the first button to the top
2. Switch the second button to the top to make sure the Dolby technology is activated
3. Switch the third button to the bottom to activate the Music mode

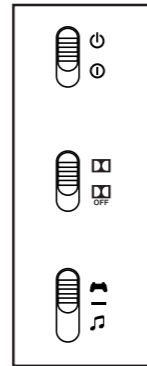

 
A. To switch to Movie/Gaming mode

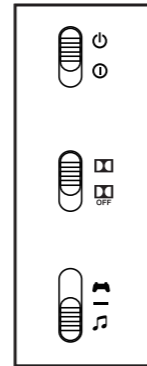

B. To switch to Music mode


Connect to XBOX ONE™

 1. Plug the 3.5mm jack into the Xbox One™ Audio Adapter
2. Insert the Xbox One™ Audio Adapter into the Xbox One™ Controller.

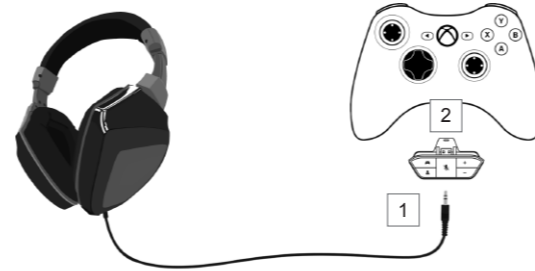

Connect to PS4™

 1. Plug the 3.5mm Plug Into PS4™ Controller
2. PS4™ Chat Function Settings:
Setting → Sound And Screen → Audio Output →
Output To Headphones → Select All Audio

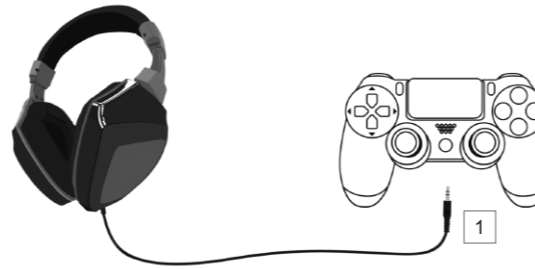

Important Information

PlayStation, PlayStation 2, PlayStation 3, PlayStation 4, PS2, PS3, PS4 and the respective images/logos are registered trademarks of Sony Computer Entertainment Inc. XBOX, XBOX360, XBOX ONE, XBOX Advanced AV Pack, XBOX Communicator, XBOX Live and the respective images/logos are registered trademark or trademarks of Microsoft Corporation in the U.S and/or other countries. All other trademarks are property of their respective owners. iPod, iPhone, iPad and the respective images/logos are registered trademarks of Apple Computer Inc.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

