# **EXSOUND Hippocampus User's Guide**



# **Package Contents**

- 1. One EXSOUND Hippocampus Decoder Box
- 2. One EXSOUND Hippocampus Clip
- 3. One USB to Micro USB Cable
- 4. One 3.5 plug to 3.5 plug Cable
- 5. One Operation Manual











# Safety Notice

WARNING: Continued exposure to high volumes of noise in headsets can cause long-term hearing damage.

Your ears will adapt to loud volume levels over time and damage your hearing even if you don't feel any discomfort.

Keeping the volume at a safe level is important while using the headset. The louder the sound is set,

the less time it takes to affect your hearing.

# Product Features / Hardware Diagram

#### **Product Features:**

EXSOUND Hippocampus- Fashion and Light Design Decoder Box,


Enjoy your Dolby Surrounding Sound for Movie/Game/Music with iPad/iPhone.


- Connect with Your iPad/iPhone for Dolby Surrounding Effect, Don't need to Compromise with Sound Quality
  while being Mobile anymore.
- Dolby Approved for Dolby Pro Logic II & Dolby Headphone Decoder
- Empower Stereo Movie/Game/Music to 5.1 Surround Sound
- Light and Fashion Design, no burden to use with iPad/iPhone when going out
- Simple to use by easily plugging to the device and enjoy Dolby Surrounding Sound
- Work with Official Headset with Original Functions


Hardware Diagram: EXSOUND Hippocampus Decoder Box

# **EXSOUND Hippocampus Decoder Box**

- 1. Power On/Off
- 2. Micro USB Jack for Recharging
- 3. LED Indicator for Recharging
- 4. Signal Input
- 5. Signal Output
- 6. Switch of Music Mode, Normal Mode and Movie Mode






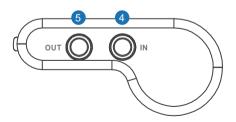

### **Product Operation & LED Indicator**

- Connect Hippocampus with iPad/iPhone by Plugging the 3.5mm to 3.5mm plug Cable on iPad/iPhone and the Signal Input jack on Hippocampus Decoder Box
- 2. Connect Hippocampus with the Headset by plugging to Signal Output
- 3. Power on Hippocampus Decoder Box
- 4. Micro USB Port for Battery Re-Charge: Use Micro USB Cable to Re-Charge the Chargeable Battery.
  - Note 1: To Re-Charge the Chargeable Battery Must Power Off Hippocampus
  - Note 2: It would be better for the battery if recharge before out of battery. Also, recharge every three month even it is not using would keep the battery works properly.
- 5. LED Indicator for Recharging:
  - Green Light when Recharging
  - Light Off when not at Recharging or when the Recharging is done

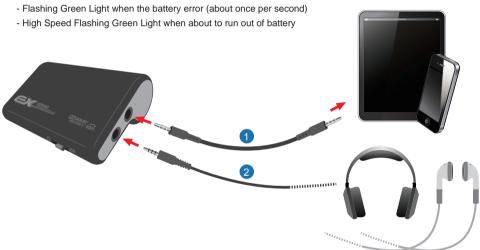

### Important information

iPhone, iPad and respective images / logos are registered trademark of Apple Computer, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are registered trademarks of Dolby Laboratories.

All other trademarks are property of their respective owners.

